


# ASSEMBLY INSTRUCTIONS: Sip & Snack Cooler Shroud

MODEL#: MET-SIPNSNACK

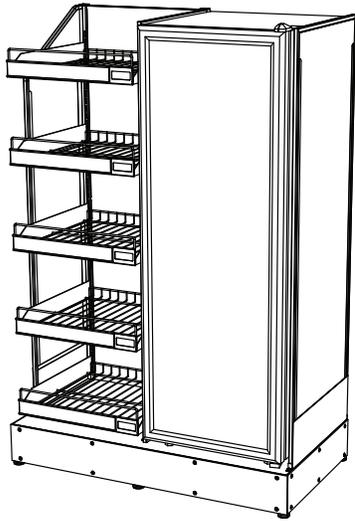

Sized for a G5 Cooler  
- Not Included


## PARTS LIST:

A	Base	1
B	Back Upright	1
C	Left Upright	1
D	Center Upright	1
E	Right Upright	1
F	Shelf	5
G	Hardware Screws	10

## GRAPHIC KIT:


G1	Left Upright Graphic	1
G2	Center Upright Graphic	1
G3	Right Upright Graphic	1
G4	Graphic Shelf	5

**\*Tools Needed:** Phillips screwdriver. Two people recommended to lift the cooler.

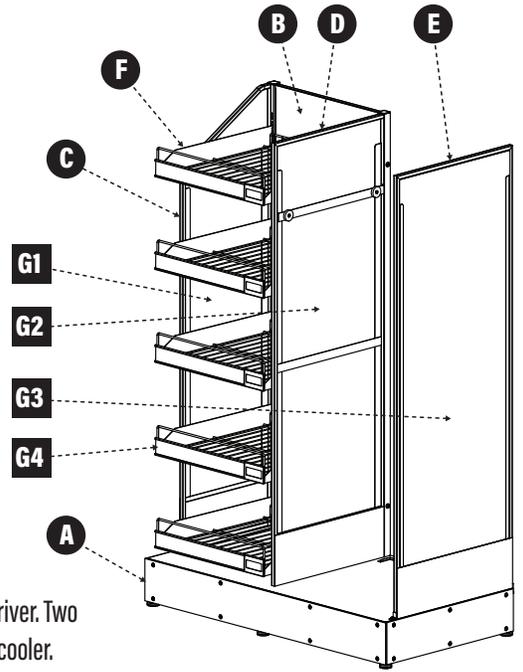


### 1 Assemble the Back Upright

Place Back Upright (B) onto Base (A). Guide the u-channel brackets into the upright's bottom tubes (slots face forward). Secure to base with hardware screws (G).

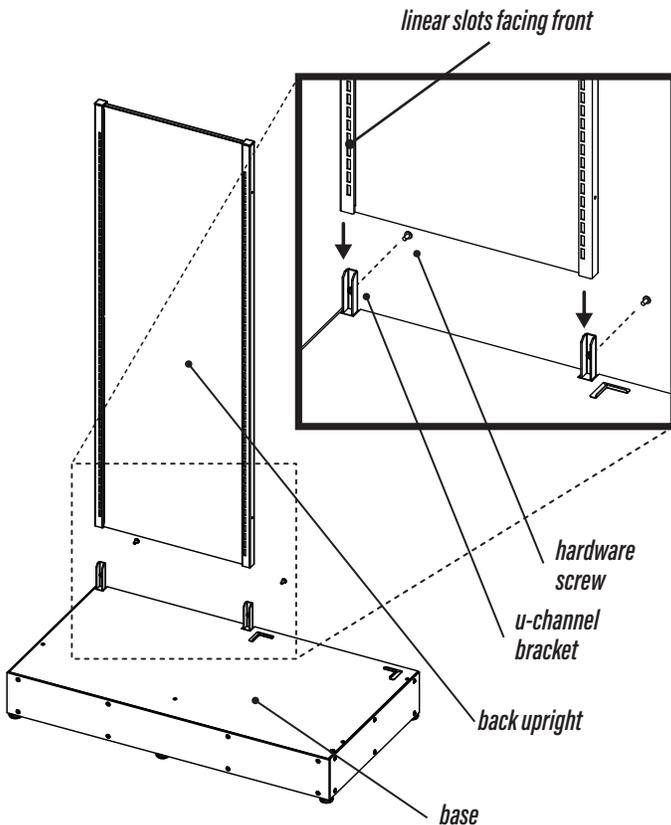


### 2 Attach Left & Center Uprights

Set Left (C) and Right (E) Uprights onto the base, align with the threaded holes on the Back Uprights. Fasten using 6 screws (G).

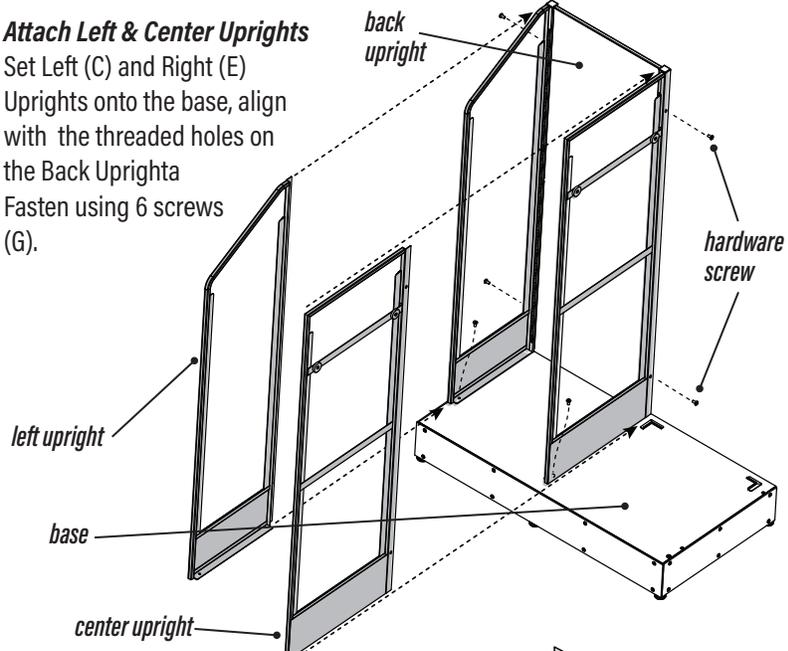

### 3 Install Upright Graphics

Slide Left Graphic (G1) into Left Upright channels. Slide Center Graphic (G2) into Center Upright (D) channels. Ensure graphics sit fully in bottom channel.

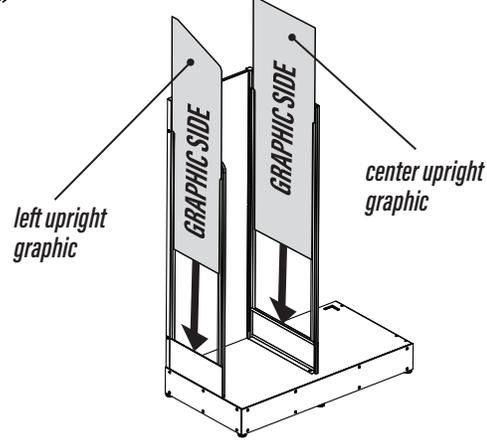

1005 Progress Cir, Lawrenceville, GA 30043  
CenturyDisplays.com © 2025 All rights reserved.


## QUESTIONS?

- 📞 Reach out directly to your rep.
- 📞 Call our mainline: 770.338.2501

# ASSEMBLY INSTRUCTIONS: *Sip & Snack Cooler Shroud*


## 4 Place Cooler

Team-lift cooler onto base.  
Slide rear feet into stoppers until fully seated.  
Magnets on Center Upright will attach to cooler.

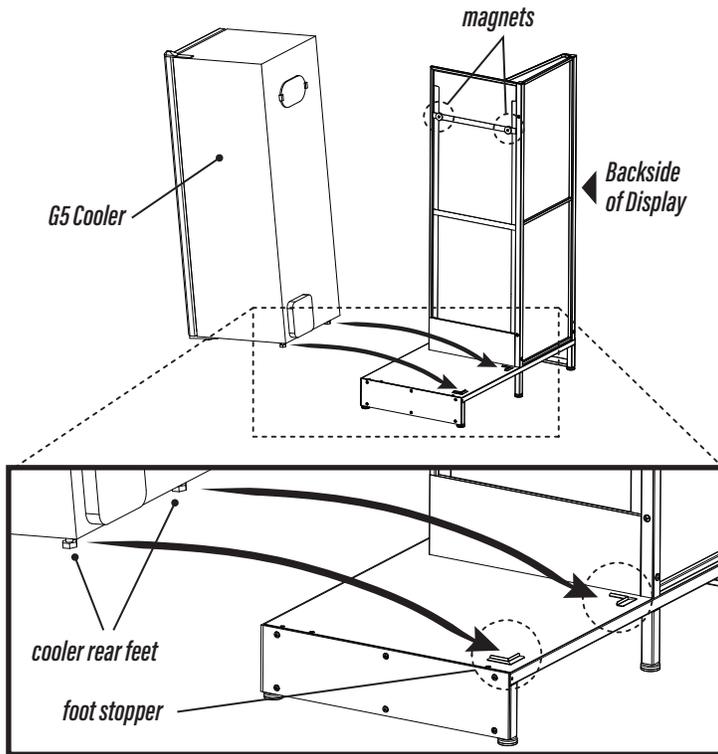


## 5 Secure Right Upright

Insert Right Upright (E) pegs into base peg holes; push down fully.  
Magnets should be fixed and secured to the cooler side.  
Fasten with 2 screws (G).

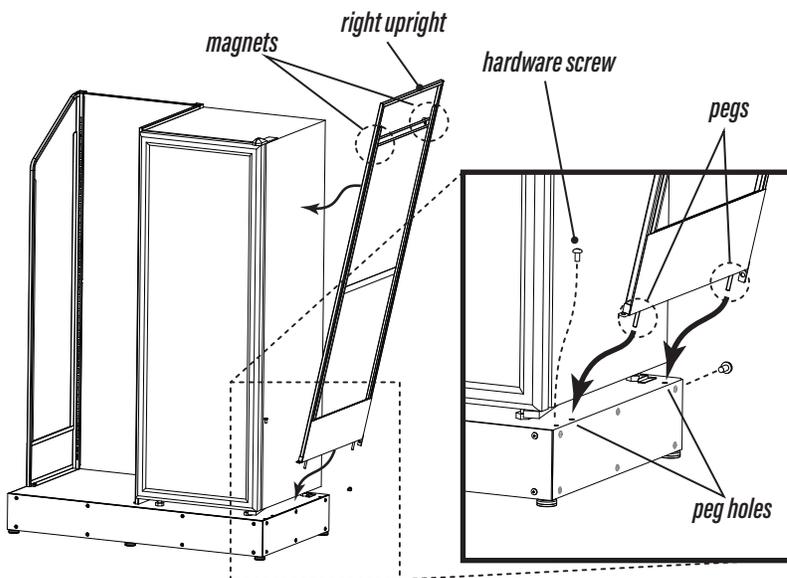


## 6 Install Shelves

Hook shelf teeth into rear slots on Back Upright.  
Make sure the shelf teeth are seat fully into the rear slots.  
Install bottom shelf in lowest position first.

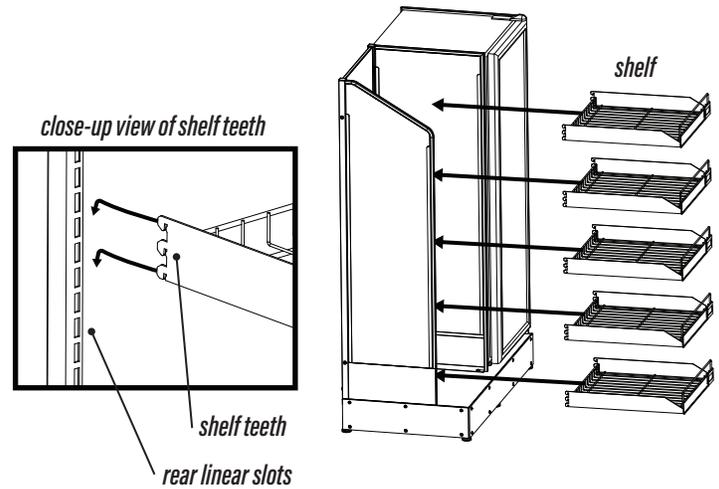

## 7 Add Shelf & Right Graphics

Slide Shelf Graphics (G4) into shelves.  
Slide Right Graphic (G3) into Right Upright channels.

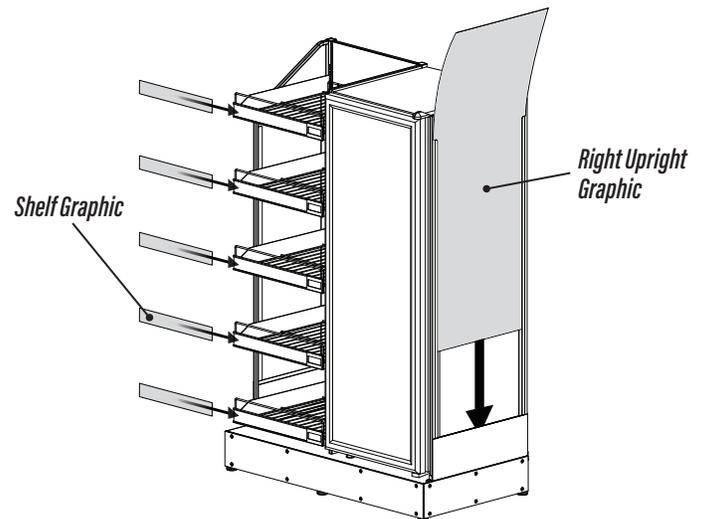

### Final checks before loading product

- Adjust the leveler feet (6) to make sure the unit is level and all the feet are firmly touching the ground.
- Make sure the cooler rear feet are fully nested into the rear stoppers on the Base and that the magnets on the uprights are secured to the cooler.
- Be sure all the shelves are fully seated into the linear slots



1005 Progress Cir, Lawrenceville, GA 30043  
CenturyDisplays.com © 2025 All rights reserved.

## QUESTIONS?



Reach out directly to your rep.



Call our mainline: 770.338.2501